



**CONCORDE BATTERY CORPORATION**

2009 San Bernardino Road

West Covina, CA 91790

Phone: 626-813-1234

[www.concordebattery.com](http://www.concordebattery.com)

**RG® SERIES MAIN AIRCRAFT BATTERY**

**COMPONENT MAINTENANCE MANUAL**

Document Number	5-0171
Initial Issue Date	Oct 10/2007
Current Revision Date	Dec 04/2018 (Rev. Q)

**APPLICABILITY**

This CMM is applicable to RG® Series Main Aircraft Batteries including batteries authorized under TSO-C173/C173a. Refer to Document No. 5-0403 for a list of TSO authorized batteries and to Document No. 5-0417 for a list of non-TSO authorized batteries. The latest revision of these documents is posted on our website. If internet access is not available, a printed copy will be furnished upon request.

**NOTES:**

**1. THIS CMM SUPERSEDES DOCUMENT NO. 5-0142 (INSTRUCTIONS FOR CONTINUED AIRWORTHINESS, CONCORDE VALVE REGULATED LEAD-ACID MAIN BATTERY) AND ALL OTHER MAINTENANCE INSTRUCTIONS FOR RG® SERIES MAIN AIRCRAFT BATTERIES ISSUED PRIOR TO 2008.**

**2. THIS CMM MAY ALSO BE USED FOR RG® SERIES EMERGENCY BATTERIES THAT ARE DEPLOYED TO ASSIST ENGINE OR APU STARTING.**

*The data/information contained herein has been reviewed and approved for general release on the basis that this document contains no export-controlled information.*

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

**RECORD OF REVISIONS**

Revision No.	Issue Date	Date Inserted	Inserted By
NC	Oct 10/2007		
A	Jun 02/2008		
B	Oct 15/2008		
C	Jan 20/2009		
D	Mar 11/2009		
E	Jan 07/2010		
F	Apr 14/2010		
G	Jul 15/2010		
H	Aug 06/2010		
J	Sep 29/2010		
K	Dec 08/2010		
L	Mar 11/2011		
M	Mar 15/2012		
N	Mar 31/2015		
P	Nov 02/2015		
Q	Dec 04/2018		

**NOTES:**

**1. THE LATEST REVISION OF THIS CMM IS AVAILABLE FOR DOWNLOAD FROM CONCORDE'S WEBSITE IN PDF FORMAT. IF YOU ARE UNABLE TO ACCESS THE INTERNET, CONTACT CONCORDE AND A PRINTED COPY WILL BE SENT TO YOU (SEE FRONT PAGE OF THIS CMM FOR WEBSITE AND COMPANY CONTACT INFORMATION).**

**2. CHANGES FROM THE PREVIOUS REVISION ARE DENOTED BY A VERTICAL LINE IN THE LEFT MARGIN.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**RECORD OF TEMPORARY REVISIONS**

Temporary Revision No.	Page Number	Issue Date	By	Date Removed	By

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**SERVICE BULLETIN LIST**

SB NUMBER	DESCRIPTION	DATE ISSUED

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

**LIST OF EFFECTIVE PAGES**

SUBJECT	PAGE(S)	DATE OF LATEST REVISION
Title Page	TP-1	Dec 04/2018
Record of Revisions	ROR-1	Dec 04/2018
Record of Temporary Revisions	RTR-1	Dec 04/2018
Service Bulletin List	SBL-1	Dec 04/2018
List of Effective Pages	LOEP-1	Dec 04/2018
Table of Contents	TOC-1 and TOC-2	Dec 04/2018
Introduction	INTRO-1 thru INTRO-3	Dec 04/2018
Description and Operation	1 thru 3	Dec 04/2018
Testing and Fault Isolation	101 thru 109	Dec 04/2018
Schematic and Wiring Diagrams	201	Dec 04/2018
Disassembly	301	Dec 04/2018
Cleaning	401	Dec 04/2018
Check	501	Dec 04/2018
Repair and Disposal	601	Dec 04/2018
Assembly	701	Dec 04/2018
Fits and Clearances	801	Dec 04/2018
Special Tools, Fixtures, Equipment and Consumables	901 and 902	Dec 04/2018
Storage (Including Transportation)	1501 thru 1505	Dec 04/2018
Appendix A	A-1	Dec 04/2018
Appendix B	B-2	Dec 04/2018
Appendix C	C-1	Dec 04/2018

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

**TABLE OF CONTENTS**

SECTION	PAGE
INTRODUCTION	INTRO-1
1. Scope and Purpose	INTRO-1
2. Application	INTRO-1
3. Definitions	INTRO-1
4. Safety Precautions	INTRO-2
5. Airworthiness Limitations	INTRO-3
6. Deviations	INTRO-3
7. Personnel	INTRO-3
8. Shop Verification	INTRO-3
DESCRIPTION AND OPERATION	1
1. General	1
2. Characteristics of RG® Series Main Aircraft Batteries	3
TEST AND FAULT ISOLATION	101
1. Capacity Testing to Verify Continued Airworthiness	101
2. Externally Mounted Components	102
3. Testing Discharged Batteries	102
4. Test Facilities	102
5. Tools, Fixtures, Equipment and Consumables	103
6. Test Set Up	103
7. Capacity Test Procedure	106
8. Constant Potential Charge Procedure	107
9. Conditioning Charge Procedure	107
10. Deep Discharge Recovery Procedure	108
11. Fault Isolation Summary	109
SCHEMATIC AND WIRING DIAGRAMS	201
DISASSEMBLY	301
CLEANING	401
1. General	401
2. Tools, Fixtures, Equipment and Consumables	401
3. External Cleaning	401
4. Internal Cleaning	401
CHECK	501
1. General	501
2. Tools, Fixtures, Equipment and Consumables	501
3. External Checking	501
4. Internal Checking	501
REPAIR AND DISPOSAL	601
ASSEMBLY	701
FITS AND CLEARANCES	801

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES	901
1. Tools	901
2. Fixtures	901
3. Equipment	901
4. Consumables	901
ILLUSTRATED PARTS LIST	NOT APPLICABLE
SPECIAL PROCEDURES	NOT APPLICABLE
REMOVAL	NOT APPLICABLE
INSTALLATION	NOT APPLICABLE
SERVICING	NOT APPLICABLE
STORAGE (INCLUDING TRANSPORTATION)	1501
1. Storage Conditions	1501
2. Storage Facilities	1501
3. Tools, Fixtures, Equipment and Consumables	1501
4. Test Set Up	1501
5. Preparation for Installation	1501
6. Constant Potential Charge Procedure	1502
7. Capacity Test Procedure	1502
8. Conditioning Charge Procedure	1503
9. Deep Discharge Recovery Procedure	1504
10. Transportation	1505
APPENDIX A – BATTERY MAINTENANCE LOG	A-1
APPENDIX B – FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION	B-1
APPENDIX C – FLOWCHART FOR CAPACITY TESTING	C-1

**LIST OF FIGURES**

FIGURE	Page
Figure 101. Test Set Up for RG® Series Main Batteries With Receptacles	105
Figure 102. Test Set Up for RG® Series Main Batteries With Threaded Terminals	105

**LIST OF TABLES**

TABLE	Page
Table 101. List of Test Equipment for 12 Volt Batteries	104
Table 102. List of Test Equipment for 24 Volt Batteries	104
Table 103. List of Mating Connectors	105
Table 901. List of Test Equipment for 12 Volt Batteries	901
Table 902. List of Test Equipment for 24 Volt Batteries	902
Table 903. List of Mating Connectors	902

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**INTRODUCTION**

1. Scope and Purpose

A. This Component Maintenance Manual (CMM) has been prepared in accordance with Air Transportation of America (ATA) Specification 100. It provides instructions for proper storage, servicing, replacement, repair, and disposal of RG® Series valve regulated lead-acid main aircraft batteries manufactured by Concorde Battery Corporation.

2. Application

A. Batteries covered by this CMM are designed for engine starting applications and may also be used as an emergency power supply.  
B. Batteries covered by this CMM have no field-replaceable components. Batteries with field-replaceable components will have a dedicated CMM with an illustrated parts list.

3. Definitions

A. Valve Regulated Lead-Acid (VRLA) battery - A lead-acid battery in which the internal pressure is regulated by a pressure relief valve and pressure build-up is minimized by internal recombination of gases formed during the charging process. A VRLA battery requires no maintenance of the liquid level which is necessary in some types of flooded lead-acid batteries.  
B. Valve Regulated Sealed Lead-Acid (VRSLA) battery - An alternate terminology for a VRLA battery (see definition above).  
C. Rated C1 capacity - The rated capacity, expressed in Ampere-hours (Ah), obtained from a fully charged battery when discharged at the C1 rate to the specified end point voltage at a temperature of 21 - 25EC (70 - 77EF).  
D. C1 rate - The rate, in amperes, equal to the battery's rated C1 capacity. For example, the C1 rate of a battery rated at 42Ah is 42 amperes.  
E. Nominal Voltage - The nominal cell voltage (2 volts for a lead-acid cell) multiplied by the number of cells in series within the battery. Batteries covered by this CMM have either 6 or 12 cells in series and a nominal voltage of 12 volts or 24 volts, respectively.  
F. Open Circuit Voltage (OCV) - The voltage of the battery at rest (no charging or discharging current present). A stable OCV requires a rest of at least four hours.  
G. End Point Voltage (EPV) - The voltage at which the discharge current is terminated when measuring battery capacity. Sometimes called cutoff voltage or voltage end point. Unless otherwise stated, the EPV is equal to 20.0 volts (10.0 volts for a 12-volt battery).



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

4. Safety Precautions

- A. **WARNING: LOW CAPACITY HAZARD.** Aircraft batteries are certified to have a certain minimum capacity for emergency operations in the event of an electrical generator system failure. Never use a battery that has less than 80% of rated capacity and never “jump start” an aircraft that has a “dead” or discharged battery.
- B. **WARNING: ELECTRIC BURN HAZARD.** Lead-acid batteries are capable of delivering high currents if the terminals are shorted. The resulting heat can cause severe burns and is a potential fire hazard. Take the following precautions:
- Do not place tools or metal objects across battery terminals.
  - Do not wear conductive rings, belt buckles, watches or other jewelry when servicing batteries.
  - Wear insulated gloves and use insulated tools when servicing batteries.
  - Install battery terminal protectors whenever the battery is not connected in the aircraft or to the test equipment.
- C. **WARNING: DANGER OF EXPLODING BATTERIES.** Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while on charge or discharge, which can explode if ignited. Take the following precautions:
- Never install batteries in an airtight or sealed enclosure and make sure installation is adequately ventilated
  - Do not smoke, use an open flame, or cause sparking near a battery.
  - Wear proper eye and face protection when servicing batteries.
  - Make sure work area is well ventilated.
  - Do not constant current charge a battery when installed in an aircraft.
  - Connect cables securely to the battery terminals to avoid arcing.
- D. **WARNING: DANGER OF CHEMICAL BURNS.** Lead-acid batteries contain sulfuric acid which can cause severe burns to body tissue. Take the following precautions:
- Never remove or damage vent valves.
  - Avoid contact of the electrolyte with skin, eyes or clothing.
  - Do not touch eyes after touching battery.
  - In the event of acid in the eyes, flush thoroughly with clean cool water for several minutes and get professional medical attention immediately.
  - Refer to battery SDS for additional information.
- E. **CAUTION: DANGER OF EQUIPMENT DAMAGE.** To prevent damage to the connector, arc burns, or explosion, batteries should never be connected or disconnected while being charged or discharged. Batteries must be connected or disconnected only when the circuit is open. Ensure the aircraft battery switch, external power source, or the charger/analyzer is in the AOFF@ position before connecting or disconnecting the battery. Battery terminal protectors should be installed whenever the battery is not connected in the aircraft or to the test equipment.

COMPONENT MAINTENANCE MANUAL  
RG SERIES MAIN AIRCRAFT BATTERIES

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

5. Airworthiness Limitations

- A. For batteries covered by TSO-C173/C173A the following limitation applies:  
The conditions and tests for TSO approval of this battery are minimum performance standards. Those installing this battery, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14CFR part 43 or the applicable airworthiness requirements. Nickel-cadmium and lead-acid battery safety concerns include the possibility of fire and venting violently.
- B. For batteries not covered by TSO-C173/C173A, there are no airworthiness limitations associated with the installation of a Concorde valve-regulated lead-acid battery in an aircraft.

**NOTE: THE AIRWORTHINESS LIMITATIONS SECTION IS FAA APPROVED AND SPECIFIES MAINTENANCE REQUIRED UNDER 14 CFR §§ 43.16 AND 91.403, UNLESS AN ALTERNATIVE PROGRAM HAS BEEN FAA APPROVED.**

6. Deviations

- A. TSO-C173 dated May 2/2005 references RTCA/DO-293 dated Jul 29/2004. Batteries approved under the authority of TSO-C173 are based on Change 1 to RTCA/DO-293 dated Dec 13/2006 or RTCA/DO-293A dated Dec 2/2009.

7. Personnel

- A. Only personnel authorized by the cognizant aviation authority are permitted to service Concorde aircraft batteries. For aircraft registered in the USA, 14CFR Part 43.3 applies.

8. Shop Verification

- A. The following sections of this CMM were verified by actual performance:
- Testing and Fault Isolation – verified 5/14/10.
  - Disassembly – not applicable.
  - Assembly – not applicable.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY  
**DESCRIPTION AND OPERATION**

1. General

A. Cell Construction:

Concorde aircraft batteries are valve-regulated, recombinant gas, absorbed electrolyte, lead acid batteries. The cells are sealed with a pressure relief valve that opens when the internal pressure exceeds the valve's relief pressure, then re-closes. The positive and negative plates are sandwiched between layers of glass mat consisting of glass micro fibers of varying length and diameter. This blend features superior wicking characteristics and promotes maximum retention of the electrolyte. Electrolyte is absorbed and held in place by the capillary action between the fluid and the absorptive glass mat (AGM) fibers. By design, the AGM separator is only about 90-95% saturated with electrolyte. The void space provides the channels by which oxygen travels from the positive to the negative plates during charging. When the oxygen gas reaches the negative plate, it reacts with lead to form lead oxide and water. This reaction at the negative plate suppresses the generation of hydrogen that otherwise would come off the negative plate. In this manner, virtually all of the gas is recombined inside the cell, eliminating the need to add water, resulting in Amaintenance free@ operation.

B. Grids and Plates:

Each cell of a storage battery has positive and negative plates arranged alternately, insulated from each other by separators. Each plate consists of a framework, called the grid, and a lead paste compound called active material. The grid is cast from a lead alloy. A heavy outside frame adds strength to the plate for good vibration and shock durability. The small horizontal and vertical wires support the active material. These wires also act as conductors for the current. The lead paste compound (active material) is applied to the grid in much the same manner as plaster is applied to a lath wall. A different paste formula is used for the positive and negative plates.

C. Plate Groups:

Plate groups are made by joining a number of similar plates to a common terminal post by means of a plate strap. The capacity of a battery is determined by the number and size of plates in a group. Each plate is made with a lug at the top which is fused to the strap. A positive group consists of a number of positive plates connected to a plate strap and a negative group consists of a number of negative plates connected in the same manner. The two groups meshed together with separators between the positive and negative plates constitute a cell element.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

D. Separators:

The main separator material is made of glass microfibers and is commonly called absorptive glass mat (AGM). This material is extremely porous so it retains a high volume of electrolyte and provides a minimum of resistance to the ions passing through it. It is also highly wettable and resists chemical attack from the electrolyte. The AGM is wrapped around the positive plates to insulate them from the negative plates. An extra layer of micro porous polyethylene surrounds the AGM layer to impart extra puncture resistance and improve battery durability. This dual AGM/polyethylene separator system is a unique feature of Concorde's RG® Series batteries.

E. Cell Containers:

After the cell elements are assembled, they are placed in a container made of plastic. The plastic used is selected for its high resistance to sulfuric acid, low gas permeability and high impact strength. In many battery models, the container is comprised of a monoblock that houses multiple cells in a single container (for example, 4, 6 and 12 cell monoblocks are common).

F. Cell Covers:

The assembled cell or monoblock has a cover made of plastic material similar to that of the cell container. The cell or monoblock cover has holes through which the terminal posts extend and it also includes the pressure relief valve(s). The cover is permanently sealed to the cell or monoblock container after the plate groups are installed.

G. Electrolyte:

The assembled cell or monoblock contains an electrolyte consisting of a mixture of sulfuric acid and water. The electrolyte is absorbed within the pores of the plates and AGM separator. Unlike flooded (vented) cells there is no "free" electrolyte under normal conditions. Therefore, the battery is classified as nonspillable. During charge, some electrolyte may be expelled from the plate and AGM separator. When charging is stopped, any expelled electrolyte will get reabsorbed into the plates and AGM separator.

H. Theory of Operation:

An electrochemical reaction takes place at each plate when a battery is being charged or discharged, as represented by the following equation:



On discharge, lead dioxide (PbO<sub>2</sub>) of the positive electrode and sponge lead (Pb) of the negative electrode are both converted to lead sulfate (PbSO<sub>4</sub>) freeing two electrons. On charge, the lead sulfate in the positive electrode is converted to lead dioxide (PbO<sub>2</sub>) (with oxygen evolution on charge) and the lead sulfate in the negative electrode is converted to sponge lead (with hydrogen evolution on charge). The electrolyte, sulfuric acid (H<sub>2</sub>SO<sub>4</sub>), is an active component in the reaction at both electrodes.

When flooded (vented) batteries are on charge, the oxygen generated at the positive plates escapes from the cell. Concurrently, at the negative plates, hydrogen is generated from water and escapes from the cell. The overall result is the gassing of the cells and water loss. Therefore, flooded cells require periodic water replenishment.

**CAUTION: DO NOT REMOVE THE PRESSURE RELIEF VALVES ON AN RG<sup>®</sup> BATTERY AND DO NOT ADD WATER OR ELECTROLYTE. THE RECOMBINANT GAS DESIGN ELIMINATES THE NEED TO REPLENISH WATER AND ELECTROLYTE. REMOVING THE PRESSURE RELIEF VALVE VOIDS THE WARRANTY.**

When valve regulated batteries are on charge, oxygen combines chemically with the lead at the negative plates in the presence of sulfuric acid to form lead sulfate and water. This oxygen recombination suppresses the generation of hydrogen at the negative plates. Overall, there is minimal water loss during charging. A very small quantity of water may be lost as a result of self-discharge reactions. However, such loss is so small that no provision need be made for water replenishment. The battery cells have a pressure relief safety valve that may vent if the battery is overcharged.

## 2. Characteristics of RG<sup>®</sup> Series Main Aircraft Batteries

- A. The RG<sup>®</sup> Series of main aircraft batteries consist of 6 or 12 cells connected in series to make a nominal 12 VDC or 24VDC battery, respectively. The cells are contained in a plastic or metallic container equipped with an electrical receptacle for mating to the aircraft. In some models, temperature sensors are present that interface to the aircraft charging and/or electrical system. Also, some models contain heaters to warm the batteries for operation in extreme cold temperature environments.
- B. Technical characteristics of the various models are detailed on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**TESTING AND FAULT ISOLATION**

1. Capacity Testing to Verify Continued Airworthiness
  - A. Batteries Used to Start Main Turbine Engines:
    1. Operating less than 1000 hours per year.
      - a. Initial check at 12 months after initial installation ( $\pm 1$  month).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 6 months in service ( $\pm 1$  month).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 3 months in service ( $\pm 1$  month).
      - d. If the capacity is less than 85%, remove battery from service.
    2. Operating 1000 hours per year or more:
      - a. Initial check at 1000 hours after initial installation ( $\pm 100$  hours).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 500 hours in service ( $\pm 100$  hours).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 250 hours in service ( $\pm 100$  hours).
      - d. If the capacity is less than 85%, remove battery from service.
  - B. Batteries Not Used to Start Main Turbine Engines:
    1. Operating less than 1000 hours per year:
      - a. Initial check at 12 months after initial installation ( $\pm 1$  month).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 12 months in service ( $\pm 1$  month).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 6 months in service ( $\pm 1$  month).
      - d. If the capacity is less than 85%, remove battery from service.
    2. Operating 1000 hours per year or more:
      - a. Initial check at 1000 hours after initial installation ( $\pm 100$  hours).
      - b. As long as the capacity is above 90%, subsequent capacity checks every 1000 hours in service ( $\pm 100$  hours).
      - c. If the capacity is 90% or below and not less than 85%, subsequent checks every 500 hours in service ( $\pm 100$  hours).
      - d. If the capacity is less than 85%, remove battery from service.

**NOTES:**

**1. THE CAPACITY CHECK INTERVALS SPECIFIED ABOVE ARE GENERAL RECOMMENDATIONS SUITABLE FOR MOST APPLICATIONS. THE INTERVALS MAY BE ADJUSTED FOR A SPECIFIC AIRCRAFT OR FLEET ONCE THE AVERAGE BATTERY LIFE IS ESTABLISHED.**

**2. CAPACITY CHECKS ARE OPTIONAL IF THE BATTERY'S FUNCTIONALITY DOES NOT AFFECT AIRWORTHINESS OF THE AIRCRAFT.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**WARNING: CAPACITY CHECKS PROVIDE ASSURANCE OF CONTINUED AIRWORTHINESS OF THE BATTERY. ADJUSTMENTS TO THE FREQUENCY OF CAPACITY CHECKS SHOULD BE BASED ON CAREFUL CONSIDERATION OF FACTORS THAT AFFECT BATTERY LIFE. THESE FACTORS INCLUDE OPERATING PATTERNS, ENVIRONMENTAL CONDITIONS, AND CONFIGURATION OF THE AIRCRAFT ELECTRICAL SYSTEM. IF ANY OF THESE FACTORS CHANGE, THE BATTERY LIFE SHOULD BE RE-ESTABLISHED USING THE ORIGINAL CAPACITY CHECK SCHEDULE.**

2. Externally Mounted Components

- A. Temperature Sensors: Some battery models are equipped with externally mounted temperature sensors. Instructions for inspection and testing of Concorde temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.
- B. Heater Control Units: Some battery models are equipped with externally mounted heater control units (HCUs). Instructions for inspection and testing of Concorde HCUs and the associated heating element within the battery are contained in separate maintenance manual supplements. These supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

3. Testing Discharged Batteries

- A. If a battery is discharged below the recommended end point voltage of 20 volts (10 volts for a 12-volt battery) and is not recharged within 24 hours, it should be subjected to a capacity test to assure airworthiness (see Section 7).
- B. After airworthiness is verified, the capacity test schedule may be adjusted using this new date and equipment flight hours as the starting point for the next capacity check interval.

4. Test Facilities

- A. Concorde valve regulated lead-acid (VRLA) batteries may be serviced in any battery facility, including nickel-cadmium service facilities. VRLA batteries are sealed to prevent cross contamination of the electrolyte.

**WARNING: LEAD-ACID BATTERIES CAN PRODUCE EXPLOSIVE MIXTURES OF HYDROGEN AND OXYGEN WHILE BEING CHARGED OR DISCHARGED. NEVER SERVICE BATTERIES IN AN AIRTIGHT OR SEALED ENCLOSURE AND MAKE SURE WORK AREA IS WELL VENTILATED.**



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

5. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 101 for required test equipment for 12 volt batteries.
- B. Refer to Table 102 for required test equipment for 24 volt batteries.
- C. Refer to Table 103 for mating connectors.

**NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.**

**CAUTION: CONTACT CONCORDE FOR ASSISTANCE WITH SELECTION OF BATTERY CHARGING EQUIPMENT. SOME BRANDS OF BATTERY CHARGERS WILL DESTROY THE BATTERY.**

6. Test Set Up

- A. Refer to Figure 101 or 102 for a schematic of the test set up.
- B. Make the interconnect cabling locally using mating connectors shown in Table 103.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

Table 101. List of Test Equipment for 12 Volt Batteries

Description	Source	Part No.	Purpose
Electronic Load, capable of constant current at C1 ADC and 10-14 VDC with EPV termination at 10 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 14.00 – 14.25 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 17 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable 9-17 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 103	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

Table 102. List of Test Equipment for 24 Volt Batteries

Description	Source	Part No.	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.00 – 28.50 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 103	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

Table 103. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
IEC 60952-2 Type A or B BAC Type 102	BAC Type 215
IEC 60952-2 Type C	MS3349-3
IEC 60952-2 Type Q MS3509	MS25182-2 or MS3349-2
IEC 60952-2 Type R	14mm or 0.550" diameter pins
M8 Threaded Terminals	8mm or 5/16" ring terminals

**NOTE: IF BATTERY RECEPTACLE IS NOT LISTED ABOVE, CONTACT CONCORDE FOR ASSISTANCE.**

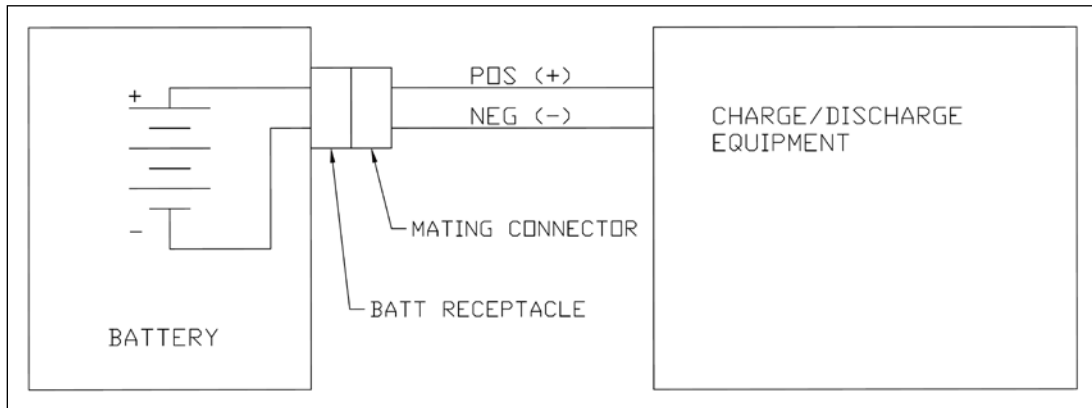


Figure 101. Test Set Up for RG® Series Main Batteries with Receptacles

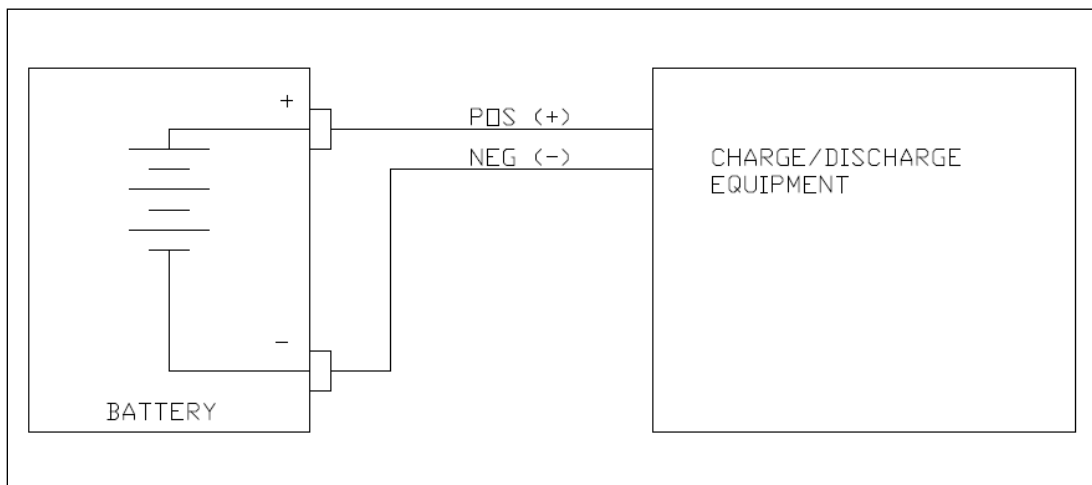


Figure 102. Test Set Up for RG® Series Main Batteries with Threaded Terminals

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

7. Capacity Test Procedure

**NOTE: A FLOWCHART FOR CAPACITY TESTING IS PROVIDED IN APPENDIX C.**

- A. If the battery is cold, warm it up to at least 20EC (68EF) before testing.
- B. If the OCV is 20 volts or above (10 volts for a 12-volt battery), charge the battery at constant potential per Section 8. If the OCV is below 20 volts (10 volts for a 12-volt battery), perform the deep discharge recovery charge per Section 10.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (i.e., 42 Amps for a 42 AH battery).
- D. Discharge the battery to an EPV of 20 volts (10 volts for a 12-volt battery) or other EPV specified by the airframe or equipment manufacturer.
- E. Record the minutes to the EPV and the % capacity (% capacity = discharge minutes x 1.667) in the Battery Maintenance Log. An example Battery Maintenance Log is provided in Appendix A; alternate formats are acceptable.
- F. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).
- G. The battery is over 90% of rated capacity if the time to the EPV is greater than 54 minutes.

**NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY TEST REQUIREMENT, WHICH SHALL TAKE PRECEDENCE.**

- H. If the battery passes the capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- I. If the battery fails the capacity test, perform the conditioning procedure given in Section 9. After the battery has been conditioned repeat the capacity test.
- J. If the battery passes the second capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- K. If the battery fails the second capacity test, repeat the conditioning charge per Section 9 and repeat the capacity test.
- L. If the battery passes the third capacity test, charge at constant potential per Section 8 and return battery to full state of charge. The battery is acceptable for installation.
- M. If the battery fails the third capacity test, the battery should be replaced.
- N. If the battery gets very hot (greater than 55EC/130EF) during constant potential charging, the battery should be replaced.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG<sup>®</sup> SERIES MAIN AIRCRAFT BATTERY

8. Constant Potential Charge Procedure

**NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY DOES NOT PASS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD THEN BE USED.**

- A. Connect the battery terminals to the constant potential charging equipment.
- B. Apply a constant potential of  $28.25 \pm 0.25$  volts ( $14.125 \pm 0.125$  volts for a 12-volt battery) with a current capability of at least  $0.2 \times C1$  amperes.

**NOTE: THE OUTPUT CURRENT OF THE CHARGING EQUIPMENT SHOULD BE SET AS HIGH AS POSSIBLE. RG<sup>®</sup> SERIES BATTERIES CAN ACCEPT CHARGING RATES UP TO  $8 \times C1$ .**

- C. Charge until the charge current falls below 5% of the battery C1 rating (i.e., 2.1 amperes for a 42AH battery) and then continue charging at the same constant potential for a minimum of 4 more hours.

**NOTE: TERMINATE CHARGING IF THE CHARGE CURRENT DOES NOT FALL BELOW 5% OF THE BATTERY C1 RATING WITHIN 8 HOURS.**

9. Conditioning Charge Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY=LIFE IF PERFORMED ON A REPETITIVE BASIS.**

**CAUTION (2): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS (17 VOLTS FOR 12V BATTERIES) WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (3): IF THE BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

**NOTE (1): CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS (17 VOLTS FOR 12 VOLT BATTERIES) TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

**NOTE (2): IF A BATTERY REQUIRES A CONDITIONING CHARGE TO PASS THE CAPACITY TEST, SUBSEQUENT CAPACITY CHECKS SHOULD BE AT THE INCREASED FREQUENCY SPECIFIED IN PARAGRAPH 1 OF THIS SECTION (3 MONTHS/250 HOURS FOR MAIN TURBINE ENGINE BATTERIES OR 6 MONTHS/500 HOURS FOR ALL OTHER BATTERIES).**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

- A. Discharge the battery at the C1 rate to an EPV of 20 volts (10 volts for a 12-volt battery). If the battery has already been discharged to the EPV, skip this step.
- B. Connect the battery to the constant current charging equipment per Table 101 or 102 as applicable.
- C. Charge at a constant current rate of C1/10 (i.e., 4.2 Amps for a battery with a C1 rating of 42 Ah) for 16 hours and then discontinue charging. The conditioning charge does not need to be continuous, i.e., pauses may be included. For example, an 8 hour charge on the first day followed by an 8 hour charge on the second day is allowable.
- D. After the conditioning charge, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

10. Deep Discharge Recovery Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS (17 VOLTS FOR 12V BATTERIES) WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A DEEP DISCHARGE RECOVERY CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

**CAUTION (2): IF THE BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CHARGE, STOP THE CURRENT AND ALLOW THE BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.**

**NOTE: CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS (17 VOLTS FOR 12 VOLT BATTERIES) TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.**

- A. Connect the battery to the constant current charging equipment per Table 101 or 102 as applicable.
- B. Charge at a constant current rate of C1/10 (i.e., 4.2 Amps for a battery with a C1 rating of 42 Ah) until the battery voltage reaches 31.0 volts (15.5 volts for a 12-volt battery), then continue charging at the same constant current rate for an additional 4 hours. The charge cycle should be continuous when using this method, i.e., no pauses should be included. However, if there is an interruption (e.g., due to a local power outage), continue from where the profile stopped and run to completion.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

**NOTE (1): IF THE BATTERY VOLTAGE EXCEEDS 31 VOLTS AT THE BEGINNING OF CHARGE AND THEN DROPS BELOW 31 VOLTS WITHIN 2 HOURS, CONTINUE CHARGING AT CONSTANT CURRENT UNTIL THE VOLTAGE REACHES 31 VOLTS A SECOND TIME. THEN CONTINUE CHARGING FOR AN ADDITIONAL 4 HOURS AS SPECIFIED ABOVE.**

**NOTE (2): IF THE BATTERY VOLTAGE DOES NOT REACH 31 VOLTS WITHIN 24 HOURS, THE CHARGE SHOULD BE TERMINATED.**

- C. After the charge is complete, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

11. Fault Isolation Summary

Symptom	Probable Cause	Corrective Action
Low voltage / no voltage.	Battery partially or fully discharged.	Perform capacity test.
	Battery fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
Battery capacity less than 85% of rating.	Battery cells beyond serviceable life.	Replace battery.
Battery does not hold charge.	Battery cells beyond serviceable life.	Replace battery.
Battery gets hot during constant potential charging.	Battery cells beyond serviceable life.	Replace battery.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY  
**SCHEMATIC AND WIRING DIAGRAMS**

1. General

- A. Schematic diagrams and/or polarity markings are shown on the envelope drawing of each specific battery model.
- B. The latest approved envelope drawings are available on Concorde's website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY  
**DISASSEMBLY**

1. General

- A. Batteries covered by this CMM have no field-replaceable components and are not designed for disassembly/re-assembly.
- B. Some battery models are equipped with externally mounted temperature sensors. Instructions for replacing temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY  
**CLEANING**

1. General

- A. This section contains general cleaning instructions for Concorde aircraft batteries.
- B. Clean battery when it is being serviced for capacity testing.
- C. Batteries do not need to be disassembled for cleaning.

**CAUTION: DO NOT USE ANY TYPE OF SOLVENT TO CLEAN THE BATTERY. SOLVENTS MAY DAMAGE THE BATTERY.**

2. Tools, Fixtures, Equipment and Consumables

- A. Consumables: Lint-free shop cloth (commercially available) and tap water (commercially available).

3. External Cleaning

- A. Clean the outside surfaces of the battery with a lint-free shop cloth that is clean, dry, and free of oil.
- B. If the battery has caked-on dirt or grime, use a cloth dampened with tap water, then wipe dry.

4. Internal Cleaning:

- A. Internal cleaning is not required.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**CHECK**

1. General
  - A. This section contains general checking instructions for Concorde aircraft batteries.
  - B. Check battery when it is being serviced for capacity testing.
  - C. Batteries do not need to be disassembled for checking.
2. Tools, Fixtures, Equipment and Consumables
  - A. None required.
3. External Checking
  - A. Check the outside surfaces of the battery and electrical connector(s) for deterioration or corrosion that may affect the battery=s operation.
  - B. Check the battery for loose or missing fasteners.
  - C. Check the identification and informational labels to ensure they are legible and securely attached.
  - D. If the above checks reveal items that need attention, repair or replace battery as appropriate.
4. Internal Checking
  - A. Internal checks are not required.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**REPAIR AND DISPOSAL**

1. General

- A. Batteries covered by this CMM have no internal components that are repairable. The battery assembly must be replaced when internal components (i.e., battery cells) fail or wear out.
- B. Refer to the Section on TESTING AND FAULT ISOLATION to determine if the battery assembly needs to be replaced.
- C. If the battery is not subjected to capacity testing in accordance with Section 1 under TESTING AND FAULT ISOLATION, it is recommended that the battery be replaced when it reaches 4 years of service life.
- D. If external repairs are needed to the battery assembly, contact Concorde for assistance (see front page of this CMM).

2. Disposal

- A. Concorde aircraft batteries contain lead, sulfuric acid, and other hazardous materials. Never discard batteries in the trash or in a landfill.
- B. The battery materials are recyclable. Dispose spent batteries and assemblies in accordance with local ordinances and regulations.
- C. Some batteries are encased in aluminum, stainless steel, or titanium containers, which need to be removed before the rest of the battery is sent to a lead smelter for recycling. Make sure the recycling collector is aware of this requirement.
- D. See battery Safety Data Sheet (SDS) for additional information.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY  
**ASSEMBLY**

1. General

- A. Batteries covered by this CMM have no field-replaceable components and are not designed for disassembly/re-assembly.
- B. Some battery models are equipped with externally mounted temperature sensors. Instructions for replacing temperature sensors are contained in separate maintenance manual supplements for each type of temperature sensor. These maintenance manual supplements are available on Concorde's website (see front page of this CMM). If internet access is not available, contact Concorde for assistance.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**FITS AND CLEARANCES**

1. General

- A. Refer to the envelope drawing for each specific battery model. The envelope drawing provides overall dimensions, mounting provisions, and maximum weight of the battery.
- B. The latest approved envelope drawings are available on Concorde=s website (see front page of this CMM).
- C. If internet access is not available, contact Concorde for assistance (see front page of this CMM).

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

**SPECIAL TOOLS, FIXTURES, EQUIPMENT AND CONSUMABLES**

1. Tools  
A. Not applicable.
2. Fixtures  
A. Not applicable.
3. Equipment  
A. Refer to Tables 901, 902 and 903.

**NOTE: EQUIVALENT SUBSTITUTES MAY BE USED FOR THESE ITEMS.**

4. Consumables  
A. Lint-free cloth (commercially available).  
B. Tap water (commercially available).

Table 901. List of Test Equipment for 12 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 10-14 VDC with EPV termination at 10 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 14.0 – 14.25 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 17 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable 9-17 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 903	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

Table 902. List of Test Equipment for 24 Volt Batteries

Description	Source	Part Number	Purpose
Electronic Load, capable of constant current at C1 ADC and 20-28 VDC with EPV termination at 20 VDC.	Commercially Available	N/A	Capacity Testing
Constant Voltage Power Supply, capable of 28.0 – 28.5 VDC and at least 0.2xC1 ADC output*.	Commercially Available	N/A	Constant Potential Charging
Constant Current Power Supply, capable of C1/10 ADC and at least 34 VDC output.	Commercially Available	N/A	Constant Current Charging
Digital Multimeter (DMM), capable of 18-34 VDC with accuracy of 1% or better.	Commercially Available	N/A	Measuring OCV
Mating Connector	Various	See Table 903	Connect Battery to Test Equipment

\* The output current of the constant potential charging equipment should be set as high as possible. RG® Series batteries can accept charging rates up to 8xC1.

Table 903. List of Mating Connectors

Battery Receptacle (Shown on envelope drawing)	Mating Connector (Obtain locally)
IEC 60952-2 Type A or B BAC Type 102	BAC Type 215
IEC 60952-2 Type C	MS3349-3
IEC 60952-2 Type Q MS3509	MS25182-2 or MS3349-2
IEC 60952-2 Type R	14mm or 0.550" diameter pins
M8 Threaded Terminals	8mm or 5/16" ring terminals

**NOTE: IF BATTERY RECEPTACLE IS NOT LISTED ABOVE, CONTACT CONCORDE FOR ASSISTANCE.**



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**STORAGE (INCLUDING TRANSPORTATION)**

1. Storage Conditions

- A. Batteries are serviced and charged at the factory prior to shipment.
- B. To minimize self-discharge, batteries should be stored in a cool location, ideally below 20EC (68EF).
- C. The open circuit voltage (OCV) of a fully charged battery is approximately 26.0 volts (13.0 volts for a 12-volt battery). As the battery state of charge drops due to self-discharge, its OCV also declines.
- D. Batteries should be boost charged per Section 6 when the OCV declines to 25.0 volts (12.5 volts for a 12-volt battery).
- E. Batteries with an OCV below 25.0 volts (12.5 volts for a 12-volt battery) must be capacity tested per Section 7 before being placed in service.
- F. Batteries in storage for longer than 24 months must be capacity tested per Section 7 before being placed in service.

**CAUTION: WHEN BATTERIES ARE INSTALLED IN AIRCRAFT DURING STORAGE (OR EXTENDED PERIODS OF NON-USE), IT IS BEST TO DISCONNECT THE BATTERY CONNECTOR. THIS PRACTICE WILL ELIMINATE UNNECESSARY DRAIN ON THE BATTERY WHEN PARASITIC LOADS ARE PRESENT. OTHERWISE, THE BATTERY SERVICE LIFE MAY BE ADVERSELY AFFECTED.**

2. Storage Facilities

- A. Concorde valve regulated lead-acid aircraft batteries may be stored and serviced in any battery facility, including nickel-cadmium service facilities. These batteries are sealed to prevent cross contamination of the electrolyte.
- B. Lead-acid batteries can produce explosive mixtures of hydrogen and oxygen while being charged or discharged. Never service batteries in an airtight or sealed enclosure and make sure the work area is well ventilated.

3. Tools, Fixtures, Equipment and Consumables

- A. Refer to Table 901 for 12 volt batteries and Table 902 for 24 volt batteries.
- B. Refer to Table 903 for mating connectors.

4. Test Set Up

- A. Refer to Figure 101 or Figure 102 as applicable.

5. Preparation for Installation

**NOTE: A FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION IS PROVIDED IN APPENDIX B.**

- A. Remove battery from the shipping carton and visually inspect the battery for signs of damage. Do not use the battery if it appears to be damaged, contact Concorde for assistance

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

- B. Measure the battery's open circuit voltage (OCV) with a DMM.
- C. If the OCV equals or exceeds 25.5 volts (12.75 volts for a 12-volt battery), the battery can be installed in the aircraft without boost charging.
- D. If the OCV equals or exceeds 25.0 volts and is less than 25.5 volts (12.5 and 12.75 volts for a 12-volt battery), apply a boost charge per Section 6. The battery can then be installed in the aircraft.
- E. If the OCV is below 25.0 volts (12.5 volts for a 12-volt battery), perform a capacity test per Section 7 before installing in the aircraft.

6. Constant Potential Charge Procedure

**NOTE: CONSTANT POTENTIAL CHARGING IS THE PREFERRED METHOD OF CHARGING THE BATTERY. IF THE BATTERY FAILS THE CAPACITY TEST, THE CONDITIONING CHARGE PROCEDURE SHOULD BE USED.**

- A. Connect the battery terminals to the constant voltage charging equipment.
- B. Apply a constant potential of  $28.25 \pm 0.25$  volts ( $14.125 \pm 0.125$  volts for a 12-volt battery) with a current capability of at least  $0.2 \times C1$  amperes.

**NOTE: THE OUTPUT CURRENT OF THE CHARGING EQUIPMENT SHOULD BE SET AS HIGH AS POSSIBLE. RG® SERIES BATTERIES CAN ACCEPT CHARGING RATES UP TO  $8 \times C1$ .**

- C. Charge until the charge current falls below 5% of the battery C1 rating (i.e., 2.1 amperes for a 42AH battery) and then continue charging at the same constant potential for a minimum of 4 more hours.

**NOTE: TERMINATE CHARGING IF THE CHARGE CURRENT DOES NOT FALL BELOW 5% OF THE BATTERY C1 RATING WITHIN 8 HOURS.**

7. Capacity Test Procedure

**NOTE: A FLOWCHART FOR CAPACITY TESTING IS PROVIDED IN APPENDIX C.**

- A. If the battery is cold, warm it up to at least 20EC (68EF) before testing.
- B. If the OCV is 20 volts or above (10 volts for a 12-volt battery), charge the battery at constant potential per Section 6. If the OCV is below 20 volts (10 volts for a 12-volt battery), perform the deep discharge recovery charge per Section 9.
- C. Connect the battery to the discharge equipment and discharge at the C1 rate on the label (i.e., 42 Amps for a 42 AH battery).
- D. Discharge the battery to an end point voltage of 20 volts (10 volts for a 12-volt battery) or other EPV specified by the airframe or equipment manufacturer.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

- E. Record the minutes to the EPV and the % capacity (% capacity = discharge minutes x 1.667) in the Battery Maintenance Log. An example Battery Maintenance Log provided in Appendix A; alternate formats are acceptable.
- F. The battery passes the capacity test if the time to the EPV is 51 minutes or greater (85% of rated C1 capacity or greater).
- G. The battery is over 90% of rated capacity if the time to the EPV is greater than 54 minutes.

**NOTE: AIRFRAME OR ACCESSORY EQUIPMENT MANUFACTURERS MAY SPECIFY A DIFFERENT CAPACITY TEST REQUIREMENT, WHICH SHALL TAKE PRECEDENCE.**

- H. If the battery passes the capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
- I. If the battery fails the capacity test, perform the conditioning procedure given in Section 8. After the battery has been conditioned repeat the capacity test.
- J. If the battery passes the second capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
- K. If the battery fails the second capacity test, repeat the conditioning charge per Section 8 and repeat the capacity test.
- L. If the battery passes the third capacity test, charge at constant potential per Section 6 and return battery to full state of charge. The battery is acceptable for installation.
- M. If the battery fails the third capacity test, the battery should be replaced.
- N. If the battery gets very hot (greater than 55EC/130EF) during constant potential charging, the battery should be replaced.

8. Conditioning Charge Procedure

**WARNING: THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.**

**CAUTION (1): A CONDITIONING CHARGE IS ONLY NECESSARY IF THE BATTERY FAILS THE CAPACITY TEST. THIS PROCEDURE MAY SHORTEN THE BATTERY'S LIFE IF PERFORMED ON A REPETITIVE BASIS.**

**CAUTION (2): THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS (17 VOLTS FOR 12V BATTERIES) WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.**

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

**CAUTION (3):** IF BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.

**NOTE (1):** CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS (17 VOLTS FOR 12 VOLT BATTERIES) TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.

- A. Discharge the battery at the C1 rate to an EPV of 20 volts (10 volts for a 12-volt battery). If the battery is already discharged to the EPV, skip this step.
- B. Connect the battery to the constant current charging equipment per Table 901 or 902 as applicable.
- C. Charge at a constant current rate of C1/10 (i.e., 4.2 Amps for a 42 Ah battery) for 16 hours and then discontinue charging. The conditioning charge does not need to be continuous, i.e., pauses may be included. For example, an 8 hour charge on the first day followed by an 8 hour charge on the second day is acceptable.
- D. After the conditioning charge, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test

9. Deep Discharge Recovery Procedure

**WARNING:** THIS PROCEDURE SHOULD ONLY BE DONE IN A WELL VENTILATED AREA BECAUSE A SIGNIFICANT AMOUNT OF HYDROGEN GAS MAY BE RELEASED FROM THE BATTERY.

**CAUTION (1):** THIS PROCEDURE WILL CAUSE THE BATTERY VOLTAGE TO GO AS HIGH AS 34 VOLTS (17 VOLTS FOR 12V BATTERIES) WHICH COULD DAMAGE ELECTRONIC CIRCUITS CONNECTED TO A BATTERY BUS. DO NOT PERFORM A CONDITIONING CHARGE WHILE THE BATTERY IS INSTALLED IN AN AIRCRAFT.

**CAUTION (2):** IF BATTERY BECOMES HOT (ABOVE 55EC/130EF) DURING THE CONDITIONING CHARGE, STOP THE CURRENT AND ALLOW BATTERY TO COOL TO ROOM TEMPERATURE BEFORE CONTINUING THE CHARGE.

**NOTE:** CHARGING EQUIPMENT USED FOR THIS PROCEDURE MUST BE CAPABLE OF OUTPUTTING AT LEAST 34 VOLTS (17 VOLTS FOR 12 VOLT BATTERIES) TO MAINTAIN A CONSTANT CURRENT THROUGHOUT THE ENTIRE CHARGE PERIOD.

- A. Connect the battery to the constant current charging equipment per Table 901 or 902 as applicable.
- B. Charge at a constant current rate of C1/10 (i.e., 4.2 Amps for a battery with a C1 rating of 42 Ah) until the battery voltage reaches 31.0 volts (15.5 volts for a 12-volt battery), then continue charging at the same constant current rate

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

for an additional 4 hours. The charge cycle should be continuous when using this method, i.e., no pauses should be included. However, if there is an interruption (e.g., due to a local power outage), continue from where the profile stopped and run to completion.

**NOTE (1): IF THE BATTERY VOLTAGE EXCEEDS 31 VOLTS AT THE BEGINNING OF CHARGE AND THEN DROPS BELOW 31 VOLTS WITHIN 2 HOURS, CONTINUE CHARGING AT CONSTANT CURRENT UNTIL THE VOLTAGE REACHES 31 VOLTS A SECOND TIME. THEN CONTINUE CHARGING FOR AN ADDITIONAL 4 HOURS AS SPECIFIED ABOVE.**

**NOTE (2): IF THE BATTERY VOLTAGE DOES NOT REACH 31 VOLTS WITHIN 24 HOURS, THE CHARGE SHOULD BE TERMINATED.**

- C. After the charge is complete, allow the battery to cool down for at least 8 hours or until the battery temperature is within 10EC/18EF of the ambient temperature, then proceed with the capacity test.

10. Transportation

- A. If the OCV is less than 25.5 volts (12.75 volts for a 12-volt battery), charge the battery per Section 6 before shipment.
- B. The battery should be packaged in its original container. If the original container is not available, follow local packaging regulations applicable to the mode of transport.
- C. RG® Series batteries are classified as a “NONSPILLABLE BATTERY” and comply with hazardous shipping exceptions of the International Air Transport Association (IATA) Dangerous Goods Regulations, International Maritime Dangerous Goods (IMDG) Code, and US Department of Transportation (DOT). As such, they can be shipped as non-hazardous by any means when packaged in original container and terminals are protected from short circuit. Refer to battery SDS for additional information, including shipping paper requirements.

CONCORDE BATTERY CORPORATION  
 COMPONENT MAINTENANCE MANUAL  
 RG® SERIES MAIN AIRCRAFT BATTERY

APPENDIX A – BATTERY MAINTENANCE LOG\*


Concorde Battery P/N:		Battery S/N:	
Date of Initial Installation:	A/C Hours @ Date of Installation:		
	OCV @ Time of Installation:		V
Aircraft Make:	Model:	S/N:	
Aircraft Location (Home base)			
1 <sup>st</sup> Removal Date:		A/C Hours @ Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
2 <sup>nd</sup> Removal Date:		A/C Hours @ Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
3 <sup>rd</sup> Removal Date:		A/C Hours @ Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours @ Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
4 <sup>th</sup> Removal Date:		A/C Hours Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
5 <sup>th</sup> Removal Date:		A/C Hours @ Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes
Date Reinstalled:	A/C Hours Date of Reinstallation:		
	OCV @ Time of Reinstallation:		V
Aircraft Make:	Model:	S/N:	
6 <sup>th</sup> Removal Date:		A/C Hours @ Date of Removal:	
Reason for Removal:	Capacity Check	%	Minutes

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

\* NOTE: This log may be used in support of a warranty claim only when supplied with other required documentation as defined in the battery warranty policy.

CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

APPENDIX B – FLOWCHART FOR PREPARING A BATTERY FOR INSTALLATION

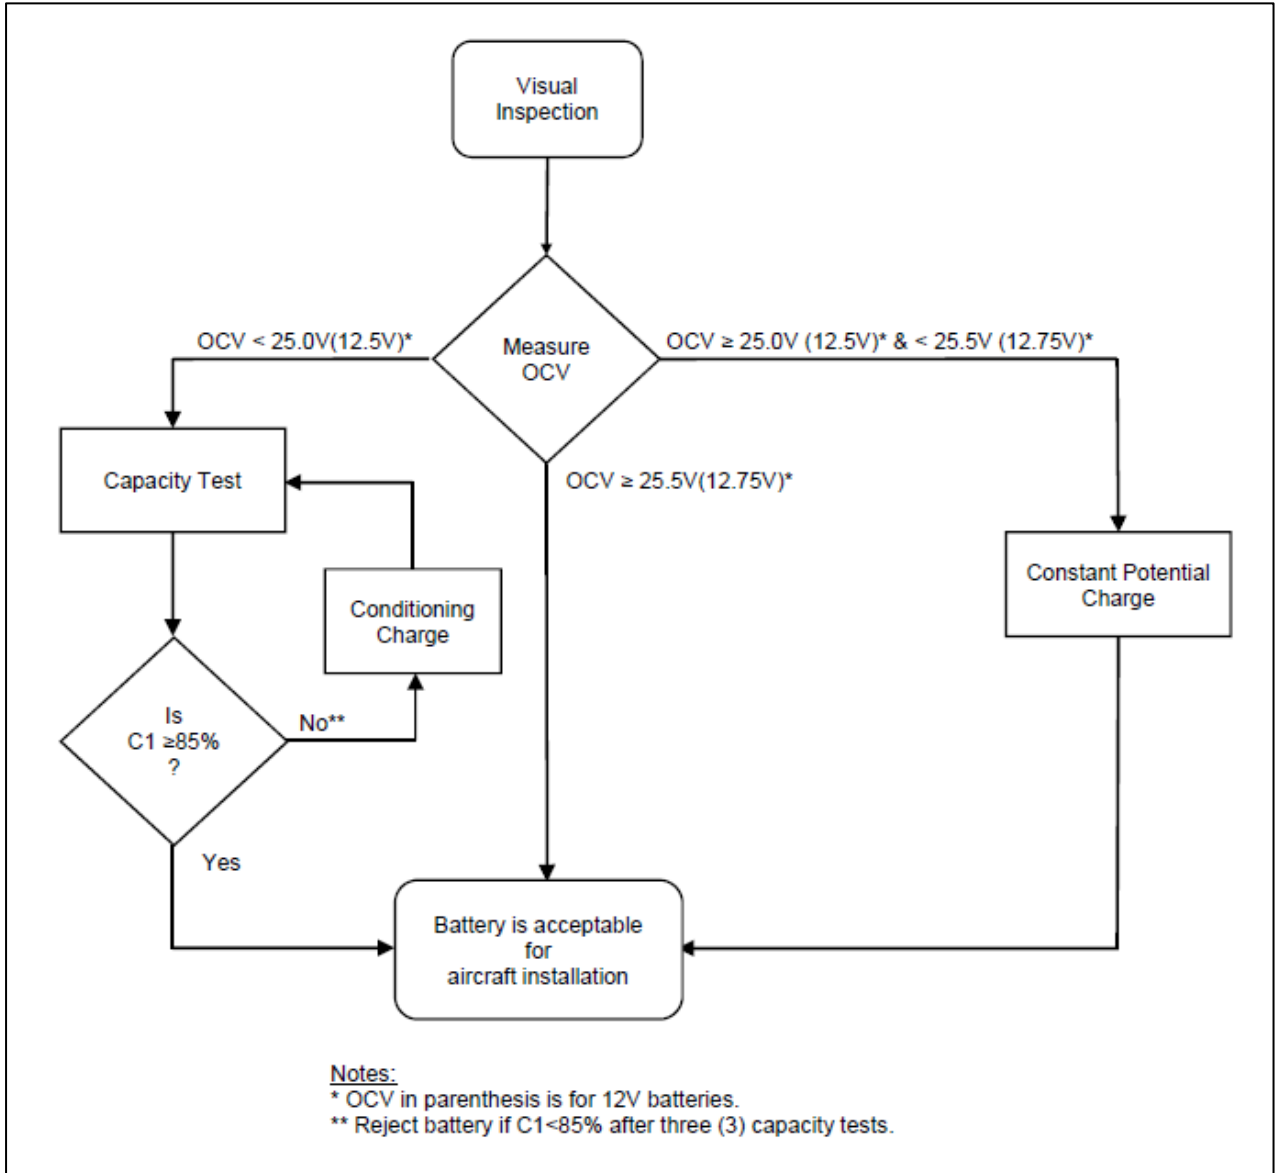



CONCORDE BATTERY CORPORATION  
COMPONENT MAINTENANCE MANUAL  
RG® SERIES MAIN AIRCRAFT BATTERY

APPENDIX C – FLOWCHART FOR CAPACITY TESTING

